

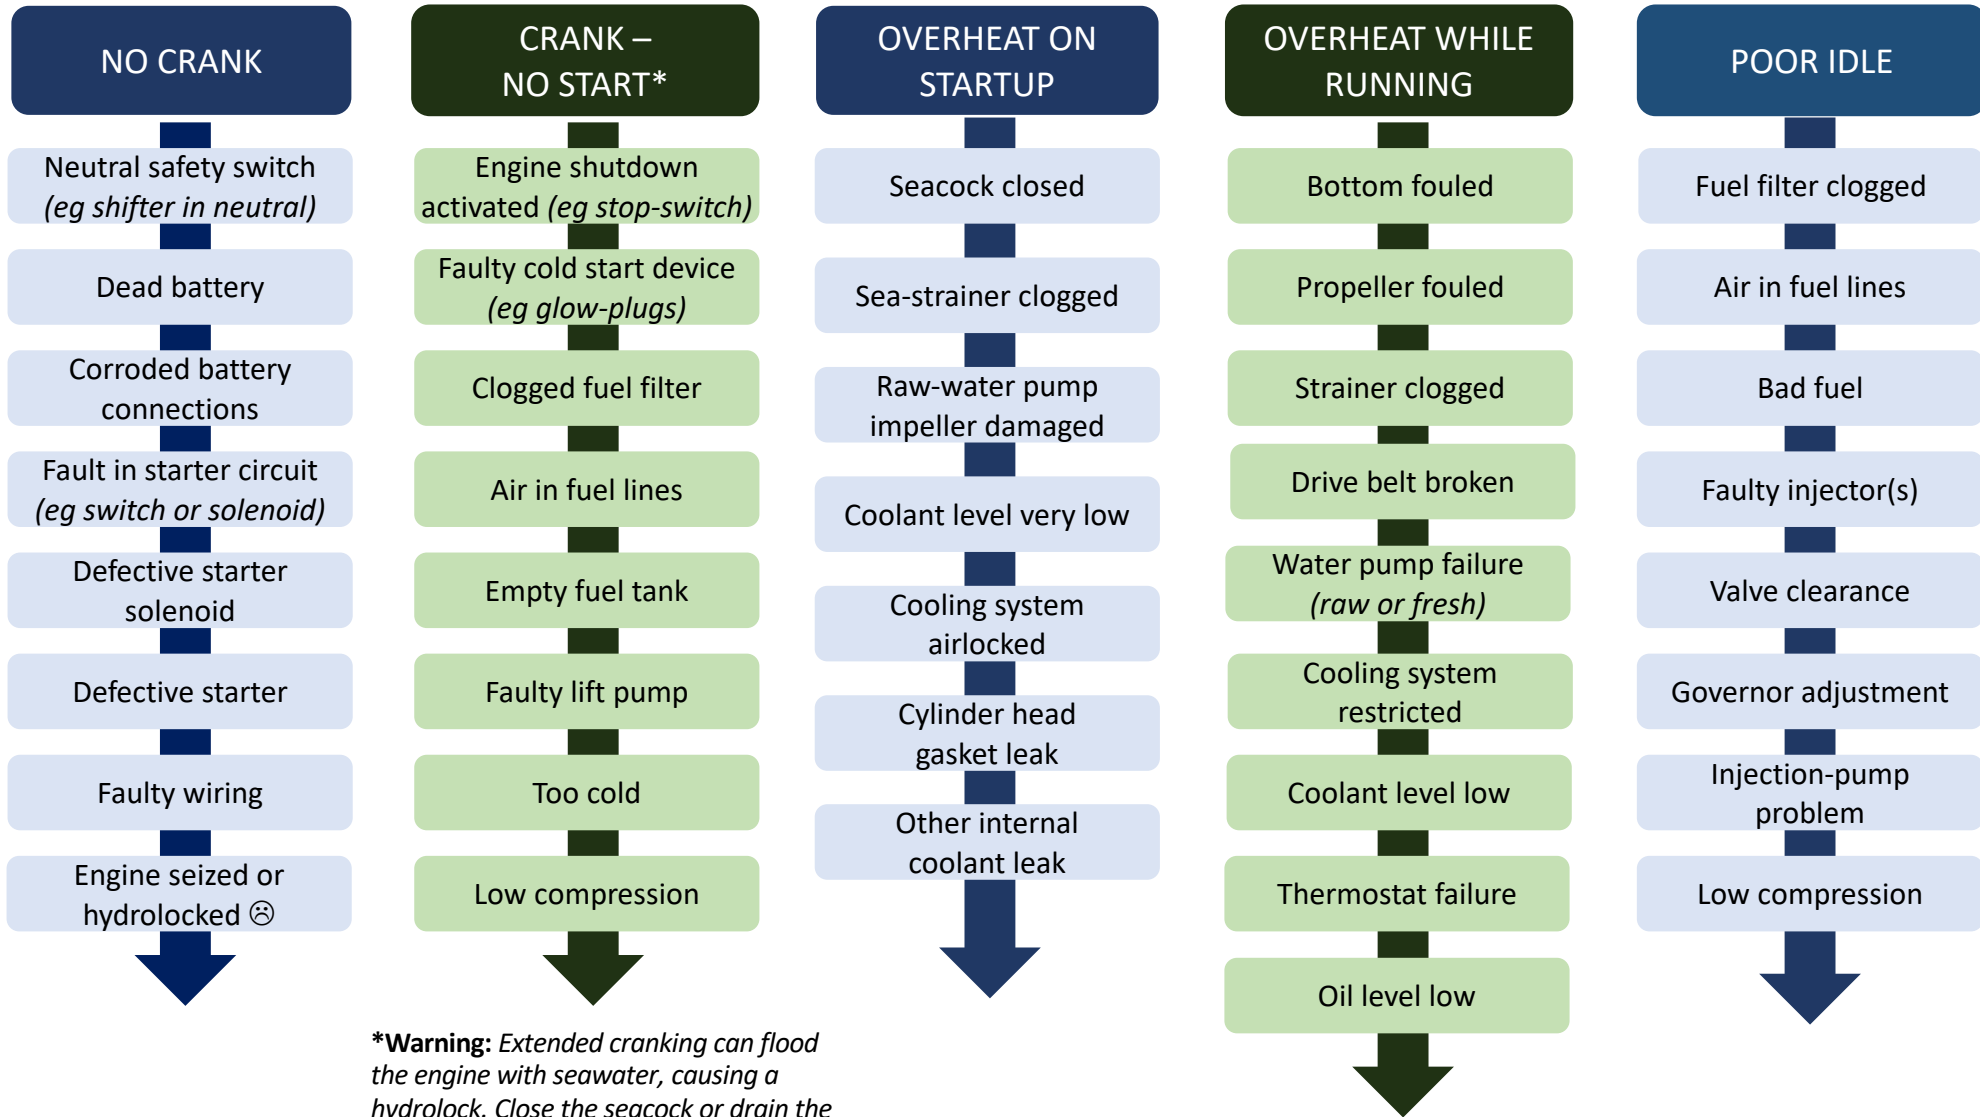
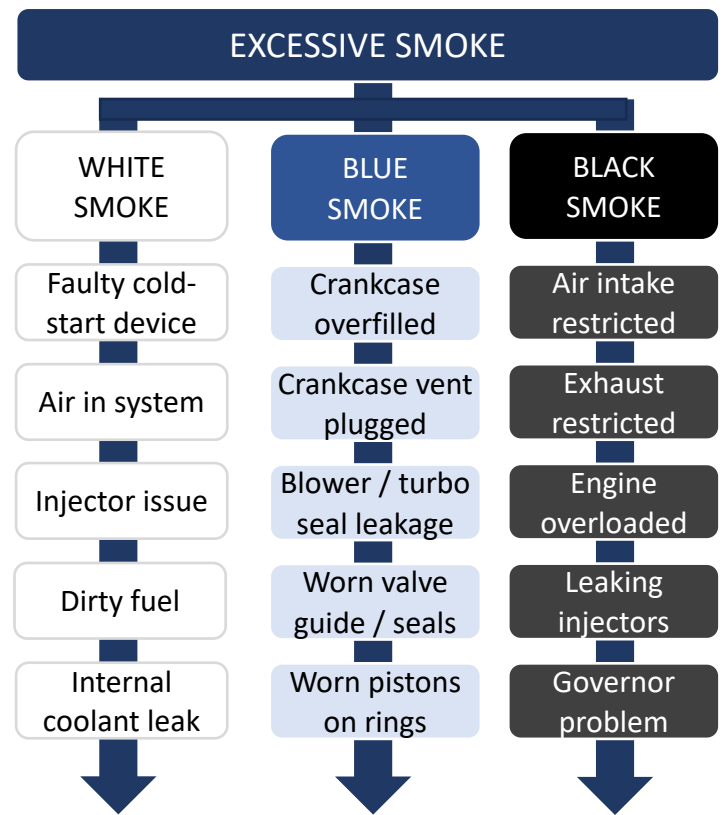
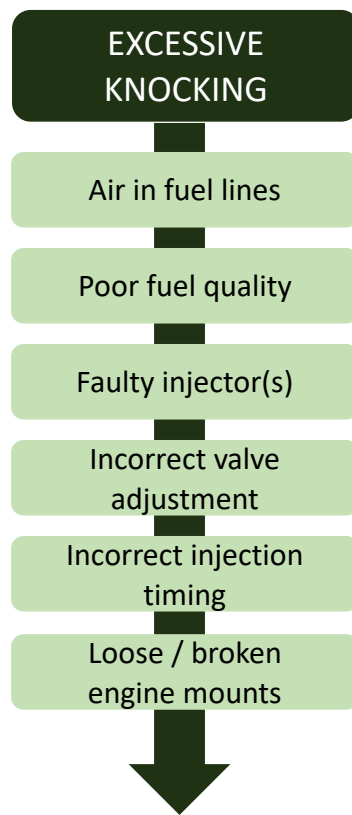


TROUBLESHOOTING COMMON ENGINE ISSUES

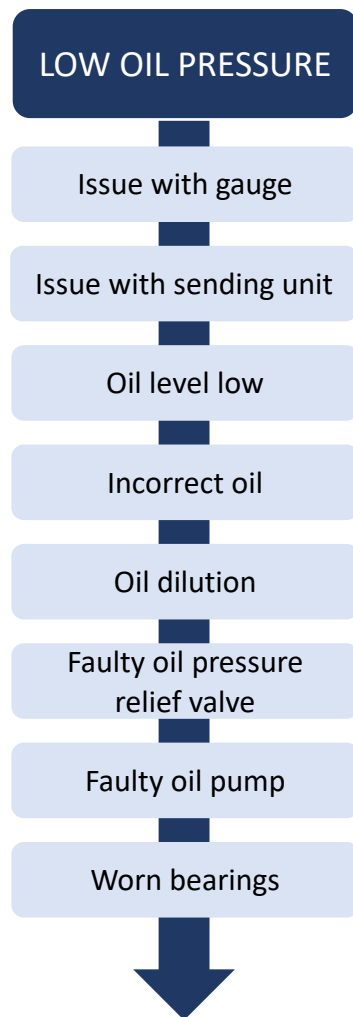

TROUBLESHOOTING COMMON ENGINE ISSUES

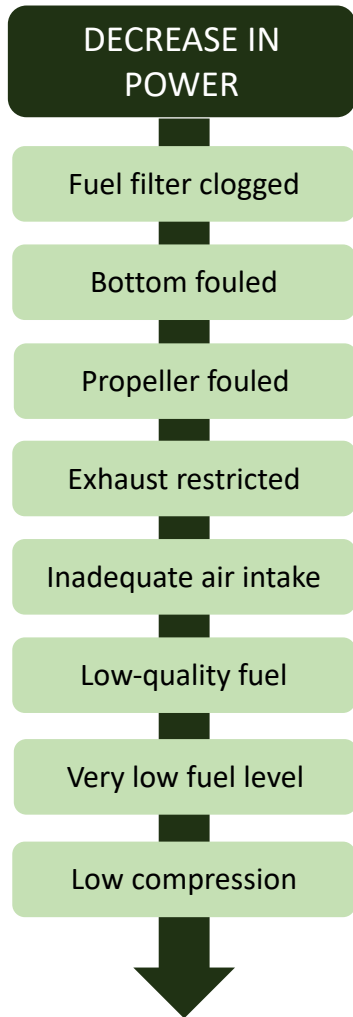

RESTING BATTERY VOLTAGES

Battery Capacity	Lead-Acid Battery Voltage*	AGM/Gel Battery Voltage*
100%	12.6 v	12.8 v
75%	12.3 v	12.6 v
50%	12.2 v	12.3 v
25%	12.0 v	12.0 v
0%	11.7 v	11.8 v

*Check voltage at the source (battery)

Note: When troubleshooting, remember that more than one issue may be going on simultaneously.